

# Contour Projector

FINE ART ILLUMINATION

## READ AND UNDERSTAND THESE INSTRUCTIONS BEFORE INSTALLING FIXTURE.

This fixture is intended for installation in accordance with National Electrical Code and local regulations. To assure full compliance with local codes and regulations, check with your local electrical inspector before installation. To prevent electrical shock, turn off electricity at fuse box before proceeding. Retain these instructions for maintenance reference.

### FLOATING

Apply first pass of drywall mud using only the edge of aluminum ceiling plate out from the panel approximately 8"-12".

**Note:** Do not apply drywall mud or tape on surface of ceiling plate.

Apply a second pass of drywall mud and gradually taper edge using a large drywall mud knife. Sand smooth, apply texture, paint or wallpaper.

### PAINTING AND FINISHING

Apply primer coat on all exposed metal areas of ceiling plate before painting.


Remove glare shield and center panel from finished ceiling plate and paint separately.

Check edge of panel and ceiling plate and carefully remove any excess paint buildup using a sharp knife. Re-install center panel and optional glare shield when paint is dry.


# FF GUIDE

## FINISHING INSTRUCTIONS

### ENGLISH INSTRUCTIONS

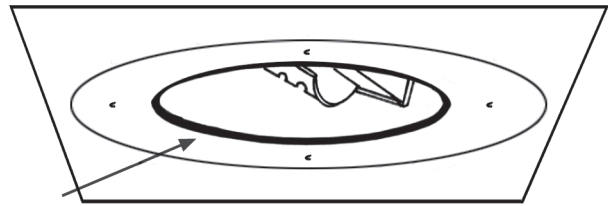


Aluminum Mounting Flange

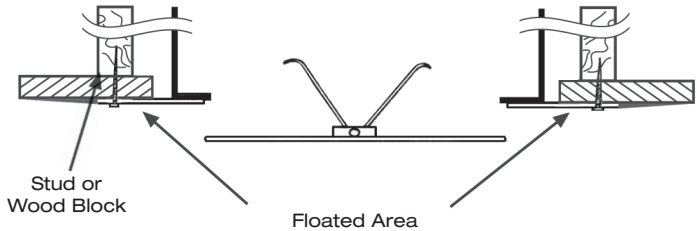


Stud or Wood Block

Floated Area

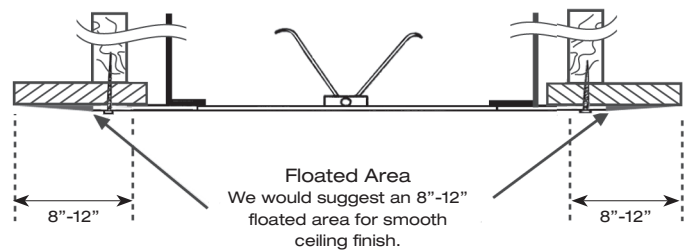


Floated Area  
We would suggest an 8"-12" floated area for smooth ceiling finish.

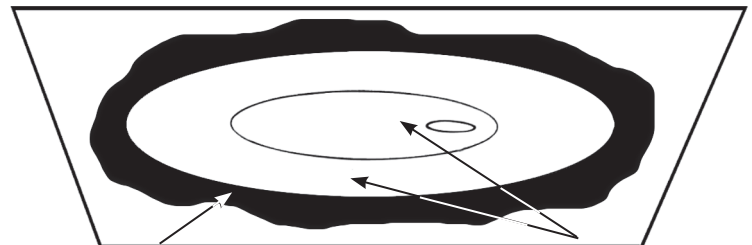

Smooth Tapered Edge

Primed Metal Surface

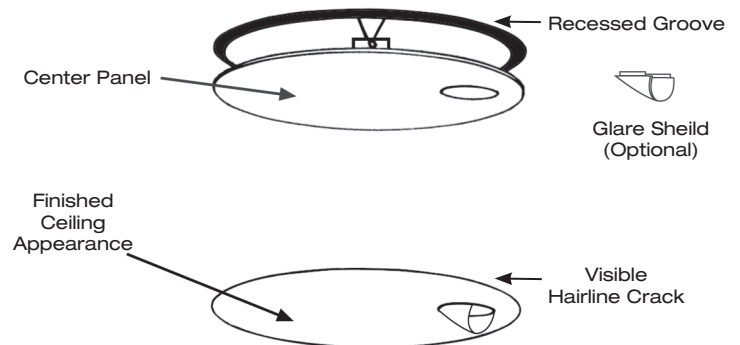

Center Panel

Recessed Groove

Glare Shield (Optional)

Finished Ceiling Appearance

Visible Hairline Crack

# Contour Projector

FINE ART ILLUMINATION

## LEA Y ENTIENDA ESTOS INSTRUCCIONES ANTES DE INSTALAR INSTALACIÓN FIJA.

Esta instalación fija se inteded para la instalación de acuerdo con Código Eléctrico Nacional y para las regulaciones locales. Para asegurar la conformidad repleta con códigos y regulaciones locales, cheque con su inspector eléctrico antes de la instalación. Para prevenir el golpe eléctrico, la vuelta de la electricidad en caja de fusibles antes de avanzar. Retenga estas instrucciones para la referencia de la conservación.

### FLOTANDO

Aplique primer capa de cemento de untas y cinta usaando solamente la orilla bicelada del plato de aluminio del techo.

**Nota:** No apliqué cemento de juntas ni cinta sobre la superficie mas alta del plato de techo.

Aplique la segunda capa de cemento de juntas y gradualmente disminuya la orilla usando una spatula ancha. Arena, suaviza, aplica la textura, la pintura o el papel pintado.

### PINTURA Y TERMINAR

Aplique el abrigo más estirado en todas áreas expuestas de metal de plato de techo antes de pintar.


Quite deslumbre el protector y el entrepaño central del plato de techo ya instalado y pinte separadamente.

Verifique la orilla del plato de techo y quite con cuidado cualquier aumento de pintura de exceso que utiliza un cuchillo agudo. Vuelva a instalar entrepaño central y opcional deslumbra el protector cuando pintura esta seca.


# GUIA FF

## INSTRUCCIONES DE TERMINAR

### INSTRUCCIONES ESPAÑOL

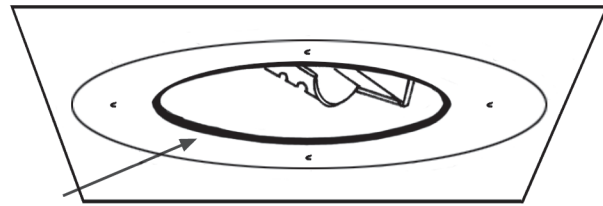


El aluminio que monta reborde

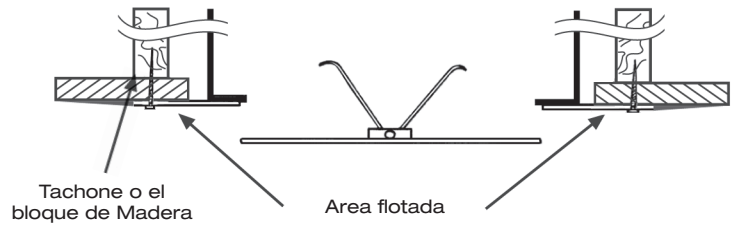

Tachone o el bloque de Madera

Area flotada

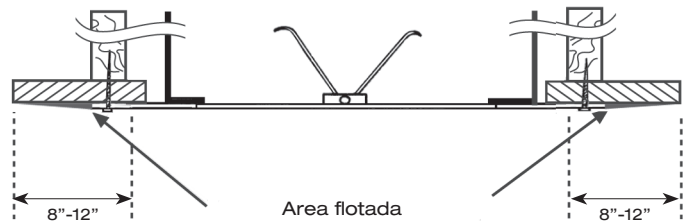


8"-12"

Area flotada


Sugerimos un 8"-12" flotó área para el fin liso de techo

8"-12"

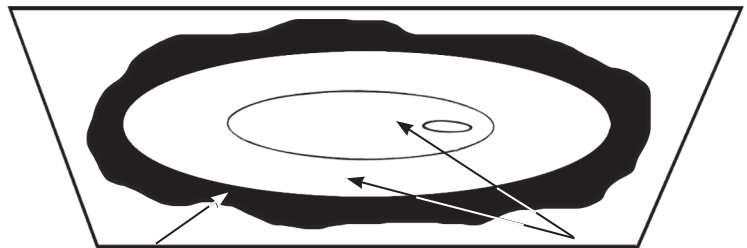

la orilla estrechada liso

superficie más estirada de metal

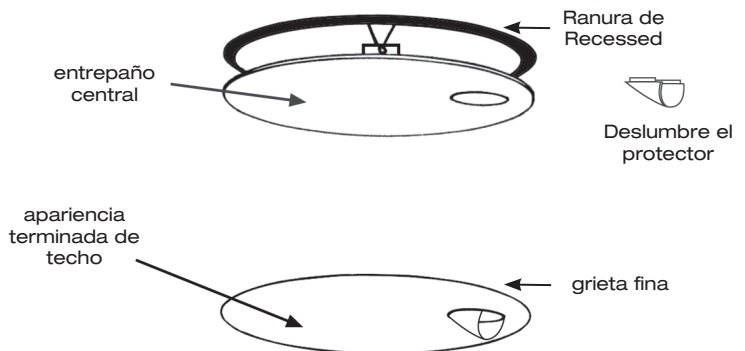

entrepaño central

Ranura de Recessed

Deslumbre el protector

apariencia terminada de techo

grieta fina